

G9SP

The G9SP safety controller provides all local safety based in- and outputs and controls the safety application.

- · Three CPU-types to suit different applications
- Clear diagnosis and monitring via Ethernet or Serial connection
- Memory cassette for easy duplication of configuration
- Unique programming software to support easy design, verfication, standardization and reusage of the program.
- Certified according to PLe (EN ISO 13849-1) and SIL 3 (IEC 61508)

- CONSULTING DISTRIBUTOR -



POHL Electronic GmbH Eduard-Maurer-Straße 11a • 16761 Hennigsdorf Tel. +49 3302 81893-0 • Fax +49 3302 81893-99 www.pohl-electronic.de • info@pohl-electronic.de

Ordering information

Appearance	Appearance description	Order code
Standalone Safety Controller	10 PNP safety inputs 4 PNP safety outputs 4 test outputs 4 PNP standard outputs	G9SP-N10S
	10 PNP safety inputs 16 PNP safety outputs 6 test outputs	G9SP-N10D
	20 PNP safety inputs 8 PNP safety outputs 6 test outputs	G9SP-N20S

Software

Appearance	Media	Applicable OS	Order code
G9SP	Setup disk 1 license	Windows 2000 Windows XP Windows Vista	WS02-G9SP01-V1
configurator	Setup disk 10 licenses		WS02-G9SP10-V1
	Setup disk 50 licenses		WS02-G9SP50-V1
	Setup disk Site license		WS02-G9SPXX-V1

Expansion units (standard I/0)

Appearance	Туре	Number of I/O		Model
		In	Out	
Expansion I/O unit	n I/O unit Sinking 12 8 (solid state) CP1W-20ED	CP1W-20EDT		
	Sourcing	ing 12 8 (solid state) CP1W-20EDT1	CP1W-20EDT1	
	Sinking	-	32 (solid state)	CP1W-32ET
	Sourcing	-	32 (solid state)	CP1W-32ET1
I/O Connecting cable, 80 cm long CP1W-CN811			CP1W-CN811	


Option units

Appearance	Order code
RS-232 Option Board	CP1W-CIF01
Ethernet Option Board (Ver. 2.0 or later) CP1W-CIF41	
Memory Cassette	CP1W-ME05M

G9SP configuration

- Safety controller G9SPExpansion I/O Units
- Memory cassette
- Ethernet option board
- S RS-232C option board
- © Compact non-contact door switch
- Safety mats
- ❸ CJ1/PLC

Relays with forcibly guided contacts

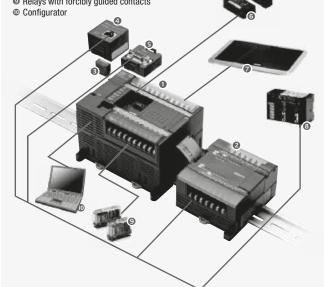

Specifications

General specifications

Power supply vo	ower supply voltage		
Consumption current	G9SP-N10S	400 mA (V1: 300 mA, V2: 100 mA)	
	G9SP-N10D	500 mA (V1: 300 mA, V2: 200 mA)	
	G9SP-N20S	500 mA (V1: 400 mA, V2: 100 mA)	
Mounting method	Nounting method		
Ambient operatir	mbient operating temperature 0°C		
Ambient storagetemperature -		-20°C +75°C	
Degree of protection		IP20 (IEC 60529)	
Ambient storage	mbient storagetemperature -		

Safety input specifications

Input type	Sinking inputs (PNP)
ON voltage	11 VDC min. between each input terminal and G1
OFF voltage	5 VDC max. between each input terminal and G1
OFF current	1 mA max.
Input current	6 mA

Safety output specifications

Output type	Sourcing outputs (PNP)
Rated output current	0.8 A max. per output*
Residual voltage	1.2 V max. between each output terminal and V2

Test output specifications

Output type	Sourcing outputs (PNP)
Rated output current	0.3 A max. per output*
Residual voltage	1.2 V max. between each output terminal and V1

Standard output specifications (G9SP-N10S)

Output type	Sourcing outputs (PNP)
ON Residual voltage	1.5 V max. (between each output terminal and V2)
Rated output current	100 mA max.*

*For details on the rated output current, please refer to the user manual of G9SP.




Control system integration

Safety - I/O-status becomes transparent

The standalone Safety Controller offers diagnosis information in 3 ways:

- 1) via parallel wiring
- 2) via serial RS232C interface (option)
- 3) via Ethernet interface (option).


Information of all safety in- and outputs on the standard control system ensure minimum downtime of the machine.

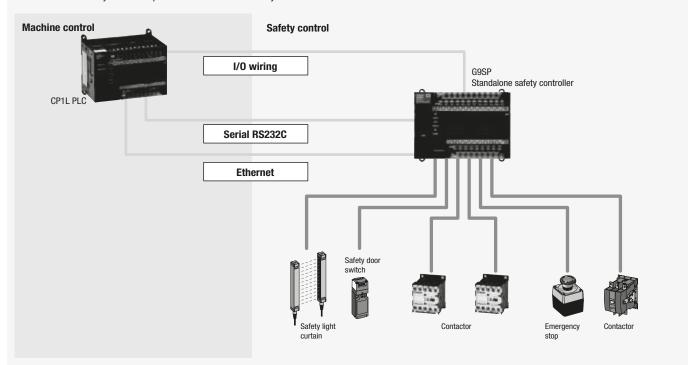

G9SP configuration tool




Easy setup and configuration is provided by a setup wizard supporting the hardware selection.

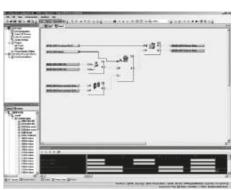

Integrated Simulator


All functions can be tested and simulated in the Configuration Tool, so there's no unnecessary additional workload for the engineer. In addition, on-line diagnosis reduces debug time to a minimum during implementation in the machine control system.



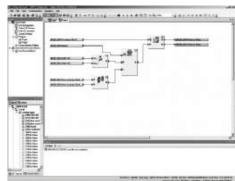

User-defined function blocks

Approved configuration elements such as a tested door monitoring solution can be easily stored as a user defined function block and re-used in future projects. This minimises the time it takes to create a new system configuration.

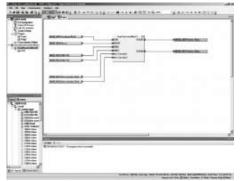

Knowledge-building

Existing configurations are the basis for new projects. The G9SP Configuration Tool supports re-use of existing and proven know-how in safety control, as well as user-defined function blocks. Which means no more repetition of effort, instead a growing library of safety solutions.




Standalone Controller


Functions

Function Blocks					
ogic Functions			Safety Device Function BI	locks	
Function Block Name	Notation on Function List	Icon	Function Block Name	Notation on Function List	Icon
NOT	NOT	100.11	External Device Monitoring	EDM	100.11
		- →	External povice memoring	25	
AND	AND	\Box	Enable Switch Monitoring	Enable Switch	g P
OR	OR	Ð	Emergency Stop Switch Moni-	E-Stop	Ena
NAND	NAND	- □	toring Light Curtain Monitoring	Light Curtain	
NOR	NOR	→	Light curtain Monitoring	Monitoring	
		7	Muting	Muting	
Exclusive OR	EXOR	Đ			Mur
Exclusive NOR	EXNOR	D	Safety Gate Monitoring	Safety Gate Monitoring	
RS-FF (Reset SetFlip-Flop)	RS-FF	-S Q-	Two Hand Controller	Two Hand Controller	ţ,
Comparator	Comparator	1110	User Mode Switch Monitoring	User Mode Switch	(j
Comparator 2	Comparator2	10 10 10 10 10 10	Redundant Input Monitoring	Redundant Input	0 5
Timer/Counter Function	ns		Cinala Daam Cafaty Canaar	Cinala Baam	
Function Block Name	Notation on Function List	Icon	Single Beam Safety Sensor	Single Beam Safety Sensor	
Off-Delay Timer	Off-Delay Timer	$\mathfrak{O}_{\!\scriptscriptstyle{\pm}}$	Non-Contact Door Switch Mon-		P
On-Delay Timer	On-Delay Timer	(5)	itoring	Door Switch	P
Pulse Generator	Pulse Generator	- ON	Safety Mat Monitoring	Safety Mat	
		Ğ.			
		7.	Reset and Restart Function	on Blocks	
Counter	Counter		Function Block Name	Notation on Function List	Icon
ountu	Counto	â 1	Reset	Reset	RES
Up-Down Counter	Up-Down Counter	and	Restart	Restart	Besti
Serial-Parallel Converter	Serial-Parallel				
	Converter	птъв	Connector Function Block	(S	
			Function Block Name	Notation on Function List	Icon
			Multi Connector	Multi Connector	=
			Routing	Routing	
			noung	noung	f

Dimensions

Safety Controller G9SP-N10S

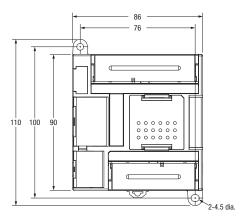

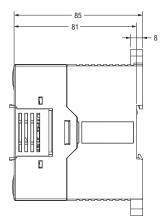

G9SP-N10D/G9SP-N20S

